

2012+ Jeep Grand Cherokee SRT, Track Hawk, and Dodge Durango Cat Back Exhaust

Part No. 92P110, 92P120, 92P125

Materials Included

- Qty (1) – MRT H-pipe
- Qty (1) – LH Under-axle Pipe
- Qty (1) – RH Under-axle Pipe
- Qty (1) – LH Muffler
- Qty (1) – RH Muffler
- Qty (4) – 3" Band Clamps, Qty (6) for Durango
- Qty (4) – 3"x3/8" Bolts
- Qty (8) – 3/8" Washers
- Qty (8) – 3/8" Lock Washers
- Qty (4) – 3/8" Nuts

Required Tools

15mm Socket

Warranty Information

IMPORTANT – The warranty on this product is VOID if the product is not properly installed, or has been modified or altered in any way. If you believe that modification will be required to fit an MRT Exhaust System on your vehicle, **please contact** MRT for assistance **BEFORE** making any modifications to the system.

NOTE:


- TrackHawk application re-uses the factory tip and does not include MRT tips.
- Durango application requires relocation of the spare tire.

Instructions



FIGURE 1

STEP 1: Remove the factory exhaust. The OE Exhaust is one piece and may require two people to remove more easily.
(Fig 1)

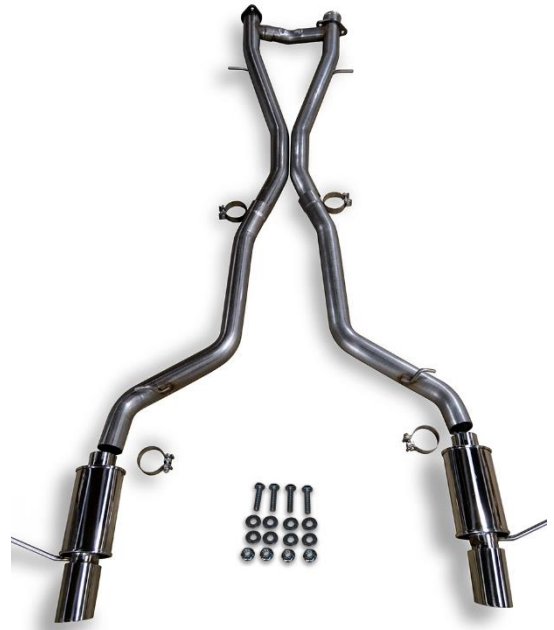

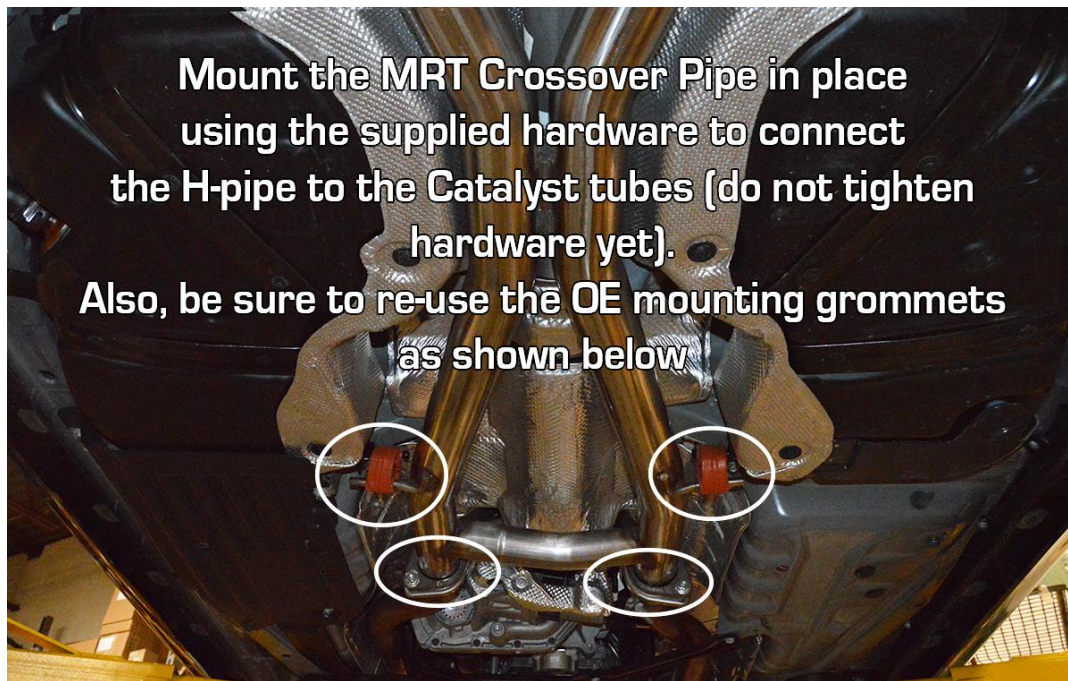


FIGURE 2

STEP 2: IMPORTANT! Loosen the factory bolts at the exhaust manifold collector where the front factory tube is connected. Do not remove the fasteners, just loosen them for fitment to the MRT H-pipe. Now, line the MRT H-pipe up with the OE Catalyst pipes. Note the hanging rods are welded to the **BOTTOM** of the H-pipe. (Fig 2)

STEP 3: Slide the MRT Hanging rods into the OE Mounting grommets. Once in place, use the supplied hardware to loosely mount the MRT Flanges to the OE flanges on the catalyst pipe. **DO NOT TIGHTEN YET.** (Fig 2)



FIGURE 3

STEP 4: Place 2 of the provided band clamps over the two outlets of the MRT H-pipe.

STEP 5: Slide the Under-axle pipes (LH and RH separately) over the H-pipe. **DO NOT TIGHTEN THE CLAMPS YET.** (Fig 3)

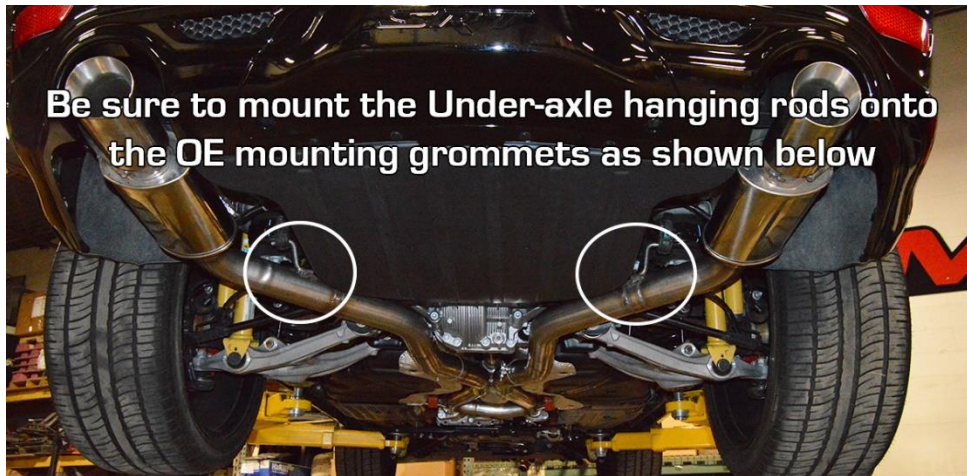


Figure 4

STEP 6: Slide the Under-axle Hanging rods onto the OE mounting grommets. (Fig 4)

STEP 7: Slide 1 of the provided band clamps over each Under-axle pipe.

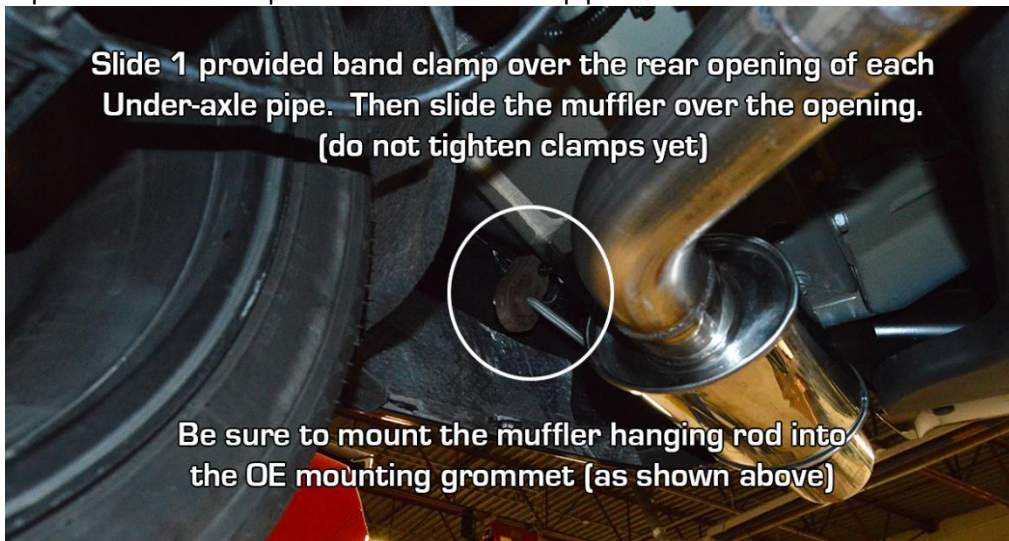


Figure 5

STEP 8: To install the muffler, start by sliding the Muffler hanging rods into the OE mounting grommets. Then slide the muffler over the Under-axle pipe (Fig 5) DO NOT TIGHTEN THE CLAMPS YET.

STEP 9: Starting with the hardware at the front of the MRT system and working your way back, tighten all of the hardware and clamps. Be sure to check your exhaust tip alignment after you tighten each clamp so adjustments can be made as necessary.

NOTE: Track Hawk tip to be installed on the MRT tube and final alignment of tip to be performed.

MRT appreciates your business; please feel free to contact us at any point with questions or concerns at 734-455-5807 or via email at Sales@MRT-Direct.com